

FI Asennusohje
 S Installation instruktioner
 N Installationsinstruktioner
 DK Installationsinstruktus
 NL Installatievoorschrift
 D Montageanweisung
 F Instructions d'installation
 ES Instrucciones de montaje
 I Istruzioni di montaggio

ML6435B/ML7435E

Electric Linear Actuators
 for Floating/Modulating Control

INSTALLATION INSTRUCTIONS

		<p>A1-A8: Installation</p>
<p>A1</p>	<p>A2</p>	<p>A3</p>
<p>A4</p>	<p>A5</p>	<p>A6</p> <p>SOFTWARE CLASS A as per EN60730</p>

<p>A7</p>	<p>A8</p> <p>OPERATING MODE TYPE 2B as per EN60730</p> <p>24 Vac 230 Vac</p>	<p>B: Spring Return Test</p> <table border="1"> <tr> <td data-bbox="1018 257 1305 526"> <p>1</p> <p>W1 = </p> <p>Y = 10 V, 1 min.</p> <hr/> <p>W1 = </p> <p>Y = 0/2 V, 1 min.</p> </td> <td data-bbox="1305 257 1444 526"> <p>2</p> <p>24 Vac 230 Vac</p> </td> </tr> <tr> <td colspan="2" data-bbox="1018 526 1444 683"> <p>3</p> <p>10...30 sec.</p> </td> </tr> </table>	<p>1</p> <p>W1 = </p> <p>Y = 10 V, 1 min.</p> <hr/> <p>W1 = </p> <p>Y = 0/2 V, 1 min.</p>	<p>2</p> <p>24 Vac 230 Vac</p>	<p>3</p> <p>10...30 sec.</p>	
<p>1</p> <p>W1 = </p> <p>Y = 10 V, 1 min.</p> <hr/> <p>W1 = </p> <p>Y = 0/2 V, 1 min.</p>	<p>2</p> <p>24 Vac 230 Vac</p>					
<p>3</p> <p>10...30 sec.</p>						
<p>C: Manual</p>	<p>D1-D4: Dismounting</p> <p>24 Vac 230 Vac</p>	<p>D1</p>				
<p>D2</p>	<p>D3</p>	<p>D4</p>				

Automation and Control Solutions

Honeywell GmbH
 Böblinger Strasse 17
 71101 Schönaich
 Germany
 Phone: (49) 7031 63701
 Fax: (49) 7031 637493
<http://ecc.emea.honeywell.com>
 Subject to change without notice.